

SA saxo active

User guide in English

vers. 1.Intl



Read the user guide and get 20% better sound

You have one of the best wireless speakers on the market. This user guide can help you to get a 20% better sound than if you simply connect up the speakers, so take a moment to read it.

You can also take part in a contest which involves finding the right position for the speakers in the picture above. See more in the user guide.

What is wrong with the position of the speakers in the picture? Find the answer in the user guide and enter the competition.





Welcome

Thank you for choosing SA.
I am responsible for the technology in
the speakers and here you get
help to get started.

The package contains two speakers, a
remote control, a speaker cable, a power
cable and a user guide.

Read the user guide and note the points
highlighted with **TIP**.

Follow these and you will get the full benefit
from your new speakers.

Use SA's offer of a free 7-year warranty
and register your speaker on our website
(under customer service).

When you register the speakers you can
also enter a competition to win an active
subwoofer that matches your speakers.

If you have any questions you are welcome
to write to us on facebook.

We will respond quickly.

Enjoy.

Ole Witthøft

Collect your audio experiences

With wireless SA speakers in the living
room, you can collect your audio
experiences in one place.

The speakers can be connected to
anything from your computer, television,
games console or iPod and you can
hear high quality music from your
wireless devices via Bluetooth.

SA saxo active consists of two
speakers. One active and one passive.
The active one must be connected to
the devices you want to listen to and is
connected to 230 V.

The two speakers must also be
connected to each other with the
supplied cable.



On or standby

Blue light means the speaker is
on.

Orange light means standby.

TIP. The speaker goes into
standby after about 20 minutes with
no signal.

Bluetooth indicator

The white light to the right indicates
the speaker's Bluetooth.

Flashing light. The speaker is
searching for other Bluetooth
devices

Steady light. The speaker is
paired with a Bluetooth device

No light. The speaker is not
using Bluetooth input.



Good to know about the active speaker

Button with three functions

Turn. Increase or decrease the
volume .

Short pressure. Switch between
speaker inputs

Longer pressure. Turn speaker on
or put it in standby .

TIP. You can turn the speaker on
by pressing the button through the
fabric at the front of the speaker .

Here you connect devices to the speaker

Follow the arrows around the speaker. Start here.

You can connect up to four devices that use cables, and an unlimited number of wireless devices using Bluetooth.

See here how you connect the different devices.

TIP The active speaker (the one you see here) should be placed to the left when you look at your speakers from the front.

The active speaker should be placed to the left when you look at your speakers from the front.

Wireless connectivity with Bluetooth

See how on the back.

Wall bracket

If you want to hang the speakers on the wall, you can fit wall bracket W.5 here.

Speaker-to-speaker cable

Here the supplied white cable connects the two speakers with each other.

Note that the cable has one square head and one round head.

Insert the tip of the square head into plus (red) and the round head into minus (black) on both speakers.

The transparent connections loosen when you turn them anti-clockwise.

There is space for the tip of the cable through the metal part of the connection.

Insert a cable into each connection and tighten firmly.

TIP You can use a longer cable, if you wish.

Active subwoofer

Here you can connect an active subwoofer.

IEC input connector

Here you connect the supplied power cable.

Connect TV, DVD, Blu-Ray or games console

The optical inputs OPT1 and OPT2 give clear sound from digital media.

Connect CD or similar

The analog input RCA accepts phono jacks.

Connect a computer or similar.

The 3.5 mm minijack plug connects a computer, iPod or similar.

TIP Computers are generally not good with Bluetooth. It is better to connect them to the speakers with a cable.

USB Charger

Here you can charge your cell phone, for example, while listening to music.



Main switch

Switch on here when you have connected all the cables. **TIP** Turn off here when you leave home for longer periods of time.



Win an active subwoofer

Win an SA saxo sub 10 active subwoofer that is perfect to use with your speakers if you want to give the sound more punch and depth.

Every month we draw lots among the correct answers in a competition.

How to enter

Look carefully at the picture and read the recommendations in the user guide. There is something wrong with the location of the speakers that you will be able to spot when you have read our recommendations.

To enter the competition, go on the System Audio website and register your speakers for our free 7-year warranty.

In the "comments" field, write what you think is wrong in the picture and then you will be in the competition for the active subwoofer.

A new winner every month.



Prize. SA saxo sub 10 active subwoofer.

You enter the competition when you write your answer for the competition in the comments field.

Operating the remote control

1. Mute
2. Stand by - Press for stand by

Bluetooth Button

3. Activate to search for other Bluetooth devices

Input Options

4. Bluetooth input selector
5. RCA input selector
6. AUX 3.5mm mini-jack input selector
7. Optical 1 input selector
8. Optical 2 input selector

Volume control

9. Turn volume up
10. Turn volume down



How to connect the speaker via Bluetooth (pairing)

1. Press the remote control standby button and turn on the speakers. Then press the Bluetooth button. The white Bluetooth indicator will then flash slowly to show the speaker is ready. (If it is lit constantly, the speaker is connected to a device that it has previously been connected to)
2. Get your Bluetooth device to search for a new device. Select 'SA saxo active' in the list of found Bluetooth devices.
3. When the connection has been set up, the white Bluetooth indicator will light continuously. You will not need to pair the device again. SA saxo active will stay on the device list.
4. If there is no connection: turn off the speaker at the main switch at the back and repeat steps 1 and 2.
5. When the devices are connected, you can control playback using the remote control or the unit.

Technical specifications

Bluetooth 4.0 lossless aptX (CD quality)
AAC (Apple), WAV,
MP3 320 kbps
2 optical digital
1 analog 3.5 mm stereo jack
1 analog stereo RCA

Output

2 x 40 watt class D
Subwoofer output
5V USB charger



facebook

Do you have any questions or need any help?

Ask our experts on Facebook and get a quick answer.
Visit us: www.facebook.com/SystemAudio

Setting up the speakers

TIP. It is important that the speakers are placed where they sound best. Try to keep them 1.5 - 2.5 meters apart and place them at the height of your ears when you are in your favourite listening position.

The iPod, iPhone and iPad are trademarks of Apple Inc.
The Bluetooth® mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and System Audio A/S uses the marks under license.

